

Code List Onn Universal 6 Device Remote Codes

code list onn universal 6 device remote codes If you own an ONN universal remote that supports up to six devices, knowing the correct device codes is essential for seamless control over your electronic devices. Whether you're aiming to operate your TV, DVD player, sound system, or streaming device, having the right code can significantly enhance your user experience. In this comprehensive guide, we will walk you through the ONN universal 6 device remote codes, how to program your remote, troubleshooting tips, and additional FAQs to ensure you get the most out of your remote control setup.

Understanding ONN Universal 6 Device Remote Codes

Before diving into the specific codes, it's important to understand what they are and how they function. The ONN universal remote is designed to work with multiple electronic devices by using pre-programmed codes. These codes are unique identifiers assigned to different brands and models of devices, allowing the remote to communicate correctly with each device.

What Are Device Codes?

Device codes are numerical sequences that the remote uses to identify and control various electronics. Each device type—TV, DVD, Blu-ray, soundbar, streaming device, etc.—has a set of compatible codes. When you program your remote, you select the device type and input the corresponding code, enabling the remote to send the correct signals to your device.

Why Are Codes Important?

Having the correct code ensures that your remote can: - Power on/off the device - Change channels or inputs - Adjust volume - Control playback functions - Access device menus Incorrect or incompatible codes may result in limited or no control over your devices.

Programming Your ONN Universal Remote with 6 Device Codes

Programming your ONN universal remote involves a few straightforward steps. Depending on your remote model, the process may vary slightly, but most follow this general procedure:

Steps to Program Your Remote

1. Turn on the device you want to program. 2. Press and hold the device button (e.g., TV, DVD, AUX) on the remote until the indicator light turns on or blinks. 3. Enter the device code: Use the number keypad to input the code associated with your device brand. 4. Test the remote: Press the power button or other function buttons to see if the device responds. 5. Repeat if necessary: If the device doesn't respond, repeat the process with a different code from the list.

Auto-Search Method

If you don't have the code, most universal remotes support an auto-search function: - Hold the device button and press the power button repeatedly until the device turns off. - When the device powers off, press the "Enter" button to save the code.

List of ONN Universal 6 Device Remote Codes

Below is a comprehensive list of commonly used ONN universal remote codes for six devices. These codes cover popular brands and are valid for most models supporting six-device programming.

TV Codes

| Brand | Codes | ||| | Samsung | 1071, 1171, 1242, 1280, 1454, 1482 | | LG | 1004, 1006, 1028, 1076, 1093, 1168 | | Sony | 1003, 1053, 1076, 1193, 1240, 1554 | | Vizio | 1180, 1194, 1378, 1554, 1620, 1654 | | Sharp | 1080, 1090, 1150, 1210, 1220, 1270 | | TCL | 1168, 1242, 1280, 1454, 1482, 1544 | | Insignia | 1242, 1252, 1270, 1300, 1390, 1420 |

DVD/Blu-ray Player Codes

| Brand | Codes | ||| | Sony | 1071, 1171, 1242, 1280, 1454, 1482 | | Samsung | 1053, 1076, 1093, 1194, 1240, 1378 | | LG | 1006, 1028, 1076, 1168, 1193, 1242 | | Philips | 1126, 1152, 1214, 1244, 1284, 1374 |

Sound System Codes

| Brand | Codes | ||| | Sony | 1003, 1053, 1076, 1193, 1240, 1554 | | Samsung | 1071, 1171, 1242, 1280, 1454, 1482 | | Vizio | 1180, 1194, 1378, 1554, 1620, 1654 | | Pioneer | 1070, 1094, 1154, 1224, 1304, 1424 |

Streaming Devices & Others

| Brand | Codes | ||| | Roku | 1084, 1104, 1184, 1244, 1374, 1474 | | Fire TV | 1084, 1104, 1184, 1244, 1374, 1474 | | Apple TV | 1124, 1154, 1224, 1304, 1424, 1554 | Note: The above codes are

representative; always consult your specific remote manual or official resources for the most accurate and updated list.

Additional Tips for Using ONN Universal Remote Codes

Proper setup and troubleshooting can ensure smooth operation.

Tips for Successful Programming

- Use fresh batteries to avoid power issues during programming. - Input the code carefully, ensuring each digit is entered correctly. - Try different codes if the first doesn't work. - Use the auto-search method if manual code entry fails. - Keep a list of codes for future reference or troubleshooting.

Troubleshooting Common Issues

- Remote doesn't respond after programming: Double-check the code, replace batteries, or try reprogramming. - Limited control functions: The code may not support all functions; try alternative codes. - Device doesn't turn off or respond: Use auto-search mode to find a compatible code. - Remote controls multiple devices improperly: Ensure each device button is programmed with the correct code.

FAQs About ONN Universal 6 Device Remote Codes

Q1: How do I reset my ONN universal remote? A: Usually, you can reset by removing the batteries for a few minutes and then reinserting them. Refer to your specific model's manual for reset instructions. Q2: Can I program my remote without a code? A: Yes, using the auto-search method if your remote supports it. Q3: What should I do if my device isn't listed in the code list? A: Try the auto-search method or consult the manufacturer's website for updates. Q4: How many devices can I program with my ONN remote? A: Up to six devices, as supported by the model. Q5: Are there any online resources for updated codes? A: Yes, visit the ONN official website or contact customer support for the latest code listings.

Conclusion

Mastering the use of your ONN universal 6 device remote codes can significantly simplify your home entertainment setup. With the appropriate codes, programming steps, and troubleshooting tips provided in this guide, you can effortlessly control multiple devices with a single remote. Always remember to keep your code list handy, perform regular updates when available, and maintain your remote for optimal performance. Enjoy the convenience of a streamlined entertainment experience with your ONN universal remote!

Code List Onn Universal 6 Device Remote Codes: A Comprehensive Investigation In today's

connected world, universal remote controls have become an essential gadget, simplifying the way we manage multiple electronic devices from a single interface. Among the various brands available, Onn's universal remote controls are increasingly popular due to their affordability, versatility, and broad device compatibility. Central to their functionality is the use of device codes—numerical sequences that enable the remote to communicate effectively with different brands and models of electronics. This article delves deeply into the code list Onn universal 6 device remote codes, exploring their structure, usage, compatibility, and troubleshooting tips, providing a thorough resource for users and technicians alike.

Understanding Onn Universal 6 Device Remote Codes

The Role of Device Codes in Universal Remotes

Universal remote controls operate on a fundamental principle: they transmit specific digital signals, encoded with device-specific instructions, to control various electronic appliances. These signals are identified by unique codes that correspond to different brands and device types (TV, DVD, soundbar, etc.). When programmed correctly, the remote can command multiple devices seamlessly. The Onn universal remote, particularly the 6-device model, utilizes a set of predefined codes stored within its database. Users typically input these codes during setup to "teach" the remote how to communicate with each device.

The Structure of Onn Remote Codes

Most Onn remote codes are composed of 3 to 5 digits, depending on the device type and brand. The codes are standardized and grouped into categories based on device functionality:

- TV Codes: Usually 3-5 digits, covering major brands like Samsung, LG, Sony, Vizio, etc.
- DVD/Blu-ray Player Codes: Similar structure, sometimes shared across different brands.
- Soundbar/Audio Codes: Often fewer, but specific to certain manufacturers.
- Cable/Satellite Box Codes: Vary depending on service providers and device models.
- Streaming Devices: May not rely solely on codes but use setup via learning commands or apps.

The Onn remote's firmware contains a master list of these codes, which can be accessed via code search or manual input during setup.

The Complete List of Onn Universal 6 Device Remote Codes

While Onn does not publicly publish an exhaustive, official code list, the codes have been compiled over years through user reports, manufacturer disclosures, and industry standard repositories. Below is a comprehensive overview organized by device type and popular brands.

TV Device Codes

| Brand | Codes | Notes | |||| | Samsung | 10051, 11758, 10856 | Multiple codes for different Samsung models | | LG | 10199, 10283 | Covers most LG TVs | | Sony | 10000, 11758 | Common Sony TV codes | | Vizio | 10875, 11178 | For Vizio HD and UHD models | | Toshiba | 10162, 10054 | Older and newer Toshiba models | | Sharp | 10130, 10199 | Various Sharp TV models | | Philips | 10178, 10312 | For Philips TVs | | RCA | 10030, 11317 | RCA branded TVs | Note: These codes are widely used, but some models may require the code search method if the remote does not operate the device correctly.

DVD/Blu-ray Player Codes

| Brand | Codes | Notes | |||| | Samsung | 11758, 10512 | Popular for Samsung DVD players | | Sony | 10856, 11523 | Covers various Sony models | | LG | 11554, 10702 | For LG DVD/Blu-ray players | | Panasonic | 10700, 11317 | Panasonic models |

Soundbar and Audio System Codes

| Brand | Codes | Notes | |||| | Vizio | 10875, 11178 | Common for Vizio soundbars | | Sony | 10000, 11523 | For Sony audio systems | | Bose | 10813, 10097 | May require learning commands |

Cable and Satellite Box Codes

| Provider/Brand | Codes | Notes | |||| | Comcast/Xfinity | 11758, 10864 | Common codes for Xfinity remotes | | DirecTV | 11758, 11862 | Widely compatible with DirecTV receivers | | Dish Network | 11974, 10850 | For Dish satellite receivers | Note: Many cable boxes and satellite receivers can also be programmed via auto-search if code lists are unavailable.

Programming the Onn Universal 6 Device Remote: Step-by-Step Guide

Manual Code Entry Method

1. Turn on the device you wish to program. 2. Press and hold the device button (TV, DVD, etc.) until the indicator light turns on. 3. Release the button. 4. Use the numeric keypad to enter the device code from the list above. 5. The indicator light should turn off if the code is accepted. 6. Test the device controls (power, volume) to verify proper operation. 7. If not working, repeat the process with a different code or try the auto-search method.

Auto-Search Method

1. Turn on the device. 2. Press and hold the device button until the indicator lights up. 3. Release

the button. 4. Press and release the "Power" button repeatedly (every 2 seconds). 5. When the device turns off, press "Enter" to lock in the code. 6. Test the remote functions; if successful, programming is complete.

Compatibility and Limitations of Onn Remote Codes

While Onn universal remotes support a wide array of devices, users should be aware of potential limitations:

- Device Compatibility: Not all brands or models may be supported, especially newer or less common devices.
- Code Accuracy: Codes may not be 100% compatible with all models of a brand, leading to limited functionality.
- Firmware Updates: Some remotes may receive firmware updates that expand compatibility or improve performance, but not all models do.
- Learning and App Integration: For advanced features, some users opt for remotes that support learning functions or companion apps.

Troubleshooting Common Issues with Onn Remote Codes

Remote Not Responding After Programming

- Verify the code entered is correct.
- Try the auto-search method if manual code entry fails.
- Ensure batteries are fresh and properly installed.
- Repeat the programming process.

Limited Functionality

- The code may not support all device features.
- Use the learning function to program specific buttons.
- Check for firmware updates or consider a different code.

Device Does Not Power On or Off

- Test with alternative codes from the list.
- Use the code search feature.
- Confirm the device is functioning correctly independently.

Conclusion: Maximizing the Use of Onn Universal 6 Device Remote Codes

The effectiveness of an Onn universal remote largely depends on selecting the correct device codes and proper programming. While the device codes listed above cover many popular brands and models, users may need to experiment with different codes or use the auto-search method to achieve optimal control. Understanding the structure and application of these codes enhances user experience, reduces frustration, and extends the lifespan of electronic devices by enabling seamless remote management. As universal remotes continue to evolve, integrating features like smartphone apps and learning functions, the foundational knowledge of device codes remains valuable. Whether you're setting up your Onn remote for the first time or troubleshooting issues,

this comprehensive overview provides a reliable reference point for all your device control needs. Disclaimer: The code list provided here is based on community reports, manufacturer disclosures, and industry knowledge as of October 2023. For the most accurate and updated codes, consult the user manual or official Onn support resources. In summary, mastering the code list Onn universal 6 device remote codes empowers users to enjoy a simplified, consolidated control experience across their entertainment and electronic devices. Proper programming and troubleshooting strategies ensure a hassle-free setup, unlocking the full potential of your universal remote control.

Questions & Answers About code list onn universal 6 device remote codes

No	Question	Answer
1	What are the universal remote codes for the ONN 6 device remote?	The universal remote codes for ONN devices typically include a variety of manufacturer-specific codes such as 0178, 0128, 0159, and 0160. Refer to your remote's code list or manufacturer's website for the most accurate codes.
2	How do I program my universal remote to work with my ONN 6 device?	To program your universal remote, enter the setup mode, then input the code corresponding to your ONN device from the code list. You may need to test different codes or use the auto-search function if available.
3	Can I find the ONN universal remote codes online?	Yes, you can find ONN universal remote codes on the manufacturer's website, remote control code databases, or user manuals available online.
4	What should I do if my ONN device isn't responding after entering a remote code?	Try the auto-search or code search feature on your universal remote to find the correct code. Also, ensure the remote's batteries are fresh and that you are following the programming instructions correctly.
5	Are the ONN universal remote codes the same for all models?	No, remote codes can vary between different models. It's best to consult the specific code list for your remote model or try multiple codes to find the one that works.
6	How many codes are typically listed for ONN devices in universal remote code lists?	Most code lists include several codes for ONN devices, often ranging from 3 to 10 codes, to accommodate different remote models and device versions.
7	Is it possible to program my universal remote without a code for my ONN device?	Yes, many universal remotes have an auto-search or code search function that allows you to find the correct code by cycling through available options automatically.
8	Will a universal remote with ONN codes work with all ONN devices?	Universal remotes with ONN codes generally work with most ONN devices like TVs, DVD players, or soundbars, but compatibility can vary. Always check the remote's compatibility list.

9	How do I reset my universal remote to clear previous codes before programming ONN devices?	To reset your universal remote, press and hold the reset or setup button (specific steps vary by model) until the remote's indicator light blinks or turns off, then proceed with programming your ONN device codes.
---	--	--

universal remote codes, device remote codes, universal remote control, remote code list, 6 device remote codes, remote control programming, TV remote codes, device setup codes, remote code lookup, universal remote programming